



Total Security
with Wi-Fi 





Table of Contents



- Table of Contents.....pg.i-iii
- Factory Zone Assignment.....pg.iv
- Connecting to Wi-Fi..... pg.v-vi

Section 1 - Getting Started



- 1.1 Intro to Total Security Main Panel.....pg.1-2
- 1.2 Password Setup.....pg.3
 - 1.2.1 Default Passwords.....pg.3
 - 1.2.2 Changing Passwords.....pg.3
 - 1.2.3 Keypad Lock.....pg.3
- 1.3 Setting Date & Time.....pg.4
- 1.4 Adding & Removing Phone Numbers.....pg.5-7
 - 1.4.1 Self-Monitored.....pg.5
 - 1.4.2 Central-Monitored.....pg.6
 - 1.4.3 Edit/Delete.....pg.7
- 1.5 Recording a Custom Message.....pg.8
- 1.6 Telephone Controls.....pg.9-10
 - 1.6.1 Remote Control.....pg.9
 - 1.6.2 Receiving a Call.....pg.10
 - 1.6.3 Making a Call.....pg.10
- 1.7 Volume & Key Tone.....pg.11
 - 1.7.1 Volume.....pg.11
 - 1.7.2 Key Tone.....pg.11
- 1.8 Screensaver & Wallpaper.....pg.12
 - 1.8.1 Screensaver.....pg.12
 - 1.8.2 Wallpaper.....pg.12

Section 2 - Adding & Removing Accessories

- 2.1 Sensors.....pg.13-23
 - 2.1.1 Door/Window Contact.....pg.13
 - 2.1.2 Standard Motion Detector.....pg.14
 - 2.1.3 Pet Friendly Motion Detector.....pg.15
 - 2.1.4 Glass Break Sensor.....pg.16
 - 2.1.5.1 Multi-Gas Leak Detector.....pg.17
 - 2.1.5.2 Carbon Monoxide Detector.....pg.18
 - 2.1.6 Smoke Detector.....pg.19



Section 2 - Adding & Removing Accessories

- 2.1 Sensors Continued.....	pg.13-23
- 2.1.7 Panic Button.....	pg.20
- 2.1.8 Smart Outlet.....	pg.21
- 2.1.9 Water Sensor.....	pg.22
- 2.1.10 Vibration Sensor.....	pg.23
- 2.2 Keypads/Keytags/Remotes.....	pg.24-26
- 2.2.1 RFID Keypad.....	pg.24
- 2.2.2 RFID Keytag.....	pg.25
- 2.2.3 RFID Keytag.....	pg.26
- 2.3 Sirens.....	pg.27-32
- 2.3.1 White Siren.....	pg.27
- 2.3.2 Plug-in Strobe Siren.....	pg.28
- 2.3.3 Strobe Siren.....	pg.29
- 2.3.4 Solar Siren.....	pg.30
- 2.3.5 Black Siren.....	pg.31
- 2.3.6 Siren Duration.....	pg.32
- 2.3.7 Ring Time.....	pg.32
- 2.4 Signal Repeater.....	pg.33
- 2.5 Removing Accessories.....	pg.34
- 2.6 Factory Reset.....	pg.34

Section 3 - Ready to Arm

- 3.1 Ready to Arm.....	pg.35
-------------------------	-------

Section 4 - Setting Delays

- 4.1 Entry/Exit Delays.....	pg.36
- 4.2 Zone 1-10 Delay.....	pg.37

Section 5 - Zone Settings

- 5.1 Attributes/Event Codes.....	pg.38
-----------------------------------	-------



Table of Contents

Section 6 - Event Monitoring

- 6.1 Power Failure Notifications.....	pg.39
- 6.2 SMS Text Notifications.....	pg.40
- 6.3 Alarm Log.....	pg.40

Section 7 - Fortress Total Security App

- Get Started.....	pg.41
- 7.1 'Function' Tab.....	pg.42
- 7.2 'Common' Tab.....	pg.43-45
- 7.2.1 Add/Remove Phone #s.....	pg.43
- 7.2.2 SMS Notifications.....	pg.44
- 7.2.3 RFID Notifications.....	pg.44
- 7.2.4 Contact ID (CID) Set.....	pg.45
- 7.2.5 GPRS Setting.....	pg.45
- 7.2.6 Ready to Arm.....	pg.45
- 7.2.7 Output w/ Alarm.....	pg.45
- 7.3 'System' Tab.....	pg.46-50
- 7.3.1 Changing Passwords.....	pg.46
- 7.3.2 Setting Date/Time.....	pg.46
- 7.3.3 Delay Arm/Disarm.....	pg.46
- 7.3.4 Siren Time.....	pg.47
- 7.3.5 System Volume.....	pg.47
- 7.3.6 Auto Arm/Disarm.....	pg.47
- 7.3.7 Appliance Timing.....	pg.48
- 7.3.8 Zone Type.....	pg.48
- 7.3.9 Remote Control.....	pg.48
- 7.3.10 Ringing Times.....	pg.49
- 7.3.11 SMS Reply.....	pg.49
- 7.3.12 Arm/Disarm Upload.....	pg.49
- 7.3.13 Arm/Disarm SMS.....	pg.50
- 7.3.14 Language.....	pg.50

Factory Zone Assignments



Factory Zone Assignments

- When you order a system the accessories you initially get will always be pre-programmed to the zones as follows:

A Kit

Zone 1- 2 = Motion Detector
Zone 5-9 = Contact Sensor
Zone 99 = Panic Button
RC Zone 1-2 Remotes

C Kit

Zone 1- 3 = Motion Detector
Zone 5-14 = Contact Sensor
Zone 99 = Panic Button
RC Zone 1-3 = Remotes

E Kit

Zone 1- 3 = Motion Detector
Zone 5-14 = Contact Sensor
Zone 99 = Panic Button
RC Zone 1-4 = Remotes/Keypad
Zone 15 = Glass Break Detector

B Kit

Zone 1- 3 = Motion Detector
Zone 5-14 = Contact Sensor
Zone 99 = Panic Button
RC Zone 1-3 = Remotes

D Kit

Zone 1- 3 = Motion Detector
Zone 5-14 = Contact Sensor
Zone 99 = Panic Button
RC Zone 1-4 = Remotes/Keypad
Zone 15 = Smoke Detector

F Kit

Zone 1- 4 = Motion Detector
Zone 5-14 = Contact Sensor
Zone 99 = Panic Button
RC Zone 1-5 = Remotes/Keypad
Zone 15 = Smoke Detector
Zone 16 = Glass Break Detector



Connecting to Wi-Fi

To connect your new Total Security Wi-Fi alarm system with your local network's Wi-Fi signal, follow the steps below.

In the mobile app...

- 1 - Register your email address and create a password.
- 2 - Login with your new email address and password.
- 3 - Tap the + button in the top right corner of the screen.
- 4 - Tap on "I want to configure."
- 5 - Select your WiFi, and enter your WiFi password.
- 6 - Before tapping on 'Start Configure,' enter the following commands on the main panel.

I want to configure

Press the Menu button on your main panel to access the Main Menu screen. From this screen, scroll to "WiFi" and press the OK button to select that option.



(continued on next page...)

Connecting to Wi-Fi



When the screen changes to “Connecting...” tap on “Start Configure” in the mobile app. It will then start connecting and show a countdown timer.



Once connected, the main panel's screen will now show “Connected to Server.”



The system will now be able to send notifications to your smartphone over your Wi-Fi, or over the Internet.

Note that your network should keep the Wi-Fi enabled at all times, and that it should also be connected to the Internet at all times.



Section 1.1: Getting Started - Intro To Your Main Panel

If needed, refer to this page while programming accessories or making changes to your panel settings.

Home Screen



Programming Menu



Menu Button: Used to access Programming Menu & also to toggle/select certain options.



Ok Button: Used to select menu options & also to save settings.



Lock/Up Arrow Button: Used to Arm your system & also to navigate through the Programming Menu.




Back Arrow: Used to go back to the previous page, multiple presses eventually returns you to the Home Screen.



Unloc/Down Arrow Button: Used to Disarm your system & also to navigate through the Programming Menu.



Microphone: Speak into when using to make phone calls & to record your custom message.

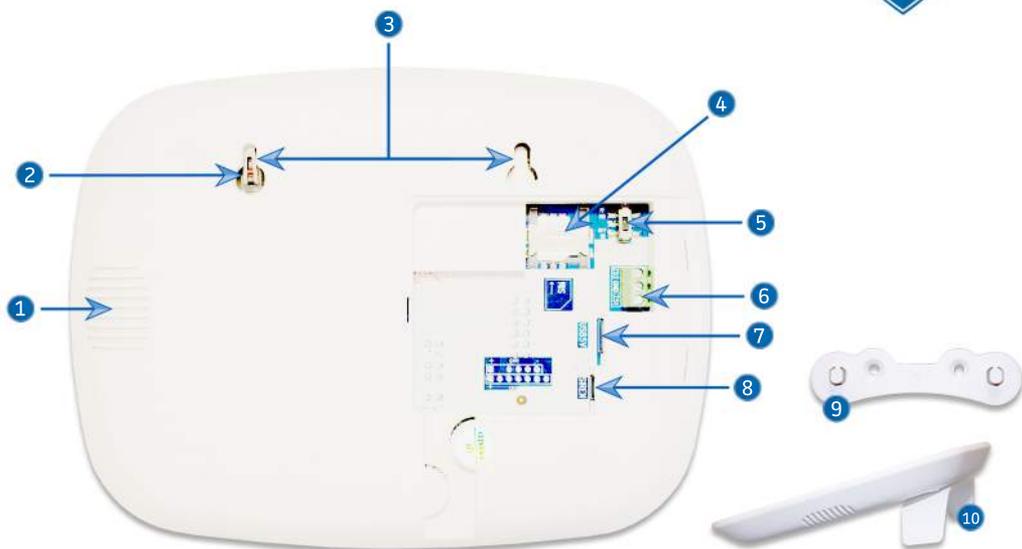

- 1 Built In Speaker:** Doubles as internal siren & as a guide through programming steps.
- 2 Tamper Switch:** If the Main Panel is removed from its bracket while the power is ON, the Tamper Switch triggers the alarm.
- 3 Mounting Holes:** Slide the Main Panel onto the bracket of your choice.
- 4 SIM Card Reader:** Insert your sim card here. Accepts all sizes of SIM cards.
- 5 ON/OFF Switch:** Turn to 'ON' to charge the backup battery while plugged into power. In case of a power outage the battery will take over. If the switch is 'OFF' the Panel will still turn on when plugged in, but will not charge the battery.
- 6 Wire Terminal:** Two zone wire terminal for hard wired sensors.
- 7 Power Port:** Micro USB power port is reliable and familiar.
- 8 Siren Port:** For external siren, like the White Siren with 3.5mm auxillary plug.
- 9 Wall Bracket:** Mounting bracket designed for hanging the Main Panel on a wall.
- 10 Table-Top Bracket:** For a laid back, moveable Main Panel.



Section 1.2: Changing Your Password(s)

- Your Panel has two passwords, one (User) is used to disarm the system, the other (Admin) is used to access & make changes in the Programming Menu. We recommend changing both passwords as soon as possible.

1.2.1 Default Passwords

- The default User password to disarm the system is 1234
- The default Admin password to access & make changes to the Programming Menu is 123456

1.2.2 Change Your Password

- From the Home Screen enter the Admin password & press
- You will now be in the Programming Menu. Scroll to "System", press
- Scroll to "Security", press
- Choose a 4-digit User password, enter it into the "User" field, you can write it here _____, press
- Choose a 6-digit Admin password, enter it into the "Admin" field, you can write it here _____, press to Save.



1.2.3 Keypad Lock

- When "ON", Keypad Lock requires a password to disarm your system, we recommend NOT changing this feature, however, the button will toggle the 'ON/OFF' switch.



Test Your New Passwords

- From the Home Screen, "Arm" your system by pressing , once armed, "Disarm" your system by typing in your "User" password, then press
- Now, type in your "Admin" password and press , you should be back in the Programming Menu, press to return to the Home Screen.

Section 1.3: Setting Date & Time



Date & Time

-From the Home Screen, type your Admin password then press

- Now in the Programming Menu, scroll to System and press


-Scroll down to 'Date & Time', press

- The default format is YY/MM/DD and is in 24-Hour Time. (meaning if it is 5 pm, you would add 12 and input 1700)

- Enter the Year, press , then the Month, then Day. Press again to begin inputting the time.

- If you prefer 12-Hour time (reads 5:00 am & 5:00 pm rather than 5:00 am and 17:00) scroll down to '24-Hour Time' and press

- Input the current time in the desired format, either 12 or 24 hour then press to Save.

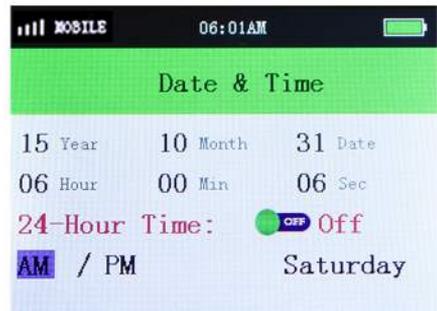



- The Total Security System can be either Self Monitored or connected through a monitoring company for a 'Centrally Monitored' System. Both will be covered starting with Self Monitored.

Adding Numbers


1.4.1 Self Monitored System

- From the Home Screen, type your Admin password then press  to enter the Programming Menu.

- The Contacts icon will be selected, press 

- The first Contact slot will be selected, press 

- Enter the ten digit phone number you would like the panel to call or text then press 

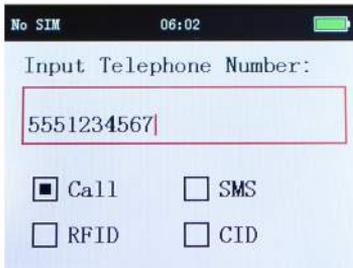

No SIM 06:02

Input Telephone Number:

5551234567

Call SMS
 RFID CID



- Use the  button to select or deselect the call out option boxes. When selected, 'Call' will call the number, 'SMS' will send a text to that number, and 'RFID' indicates that this will be the number to receive notifications of RFID tag use. If all three are selected then the panel will do all three options for that number.

- Press  to Save.

- To add more numbers, scroll down to the next empty contact slot and press , then repeat the above steps.


- Press  to return to the Home Screen




Adding Numbers

1.4.2 Centrally Monitored System

- From the Home Screen, type your Admin password then press to enter the Programming Menu.
- The Contacts icon will be selected, press
- The first Contact slot will be selected, press
- Enter the ten digit phone number provided by your monitoring company, then press

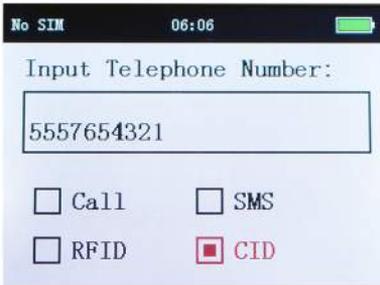

- Use the button to deselect all options but 'CID'.
- Press to Save.
- To add more numbers, scroll down to the next empty contact slot and press , then follow the steps from 'Self Monitored System' on the previous page.
- Press to return to the Programming Menu. Scroll to System & press
- Scroll down to 'Contact ID' & press

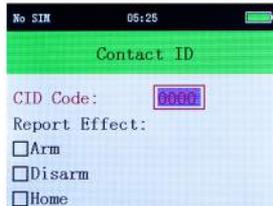

- Enter the 4- digit code provided by your monitoring company. Press down & use the button to select when the monitoring company will be alerted.
- Press to Save.



Section 1.4: Adding/Removing Phone Numbers

1.4.3 Editing/Removing Numbers

- The process of editing or removing numbers is the same for both Self Monitored & Centrally Monitored Systems.



- From the Home Screen, type your Admin password then press to enter the Programming Menu.

- The Contacts icon will be selected, press

- Scroll to the number you would like to make changes to & then press .

- You will see a pop up window, with two options to highlight: 'Add/Edit' & 'Delete'. If you select 'Add/Edit' you will be taken into the contact immediately to make any changes, press to Save changes.

- To Delete the number, highlight 'Delete' & press . You will be asked to confirm, press to confirm, or use the to scroll over to 'No' & return to the pop up menu.

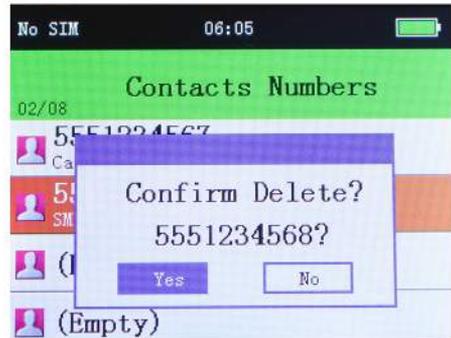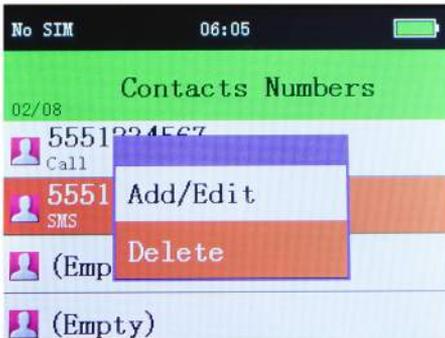

- Press the to return to the Programming Menu or Home Screen.

Custom Message

- *Designed for Self Monitored systems, you can record up to 10 seconds of audio to be played when your system calls you letting your contact list know that an alarm is going off. Rather than a silent line for example, say something like "Fortress Alarm System, Contact Admin or Call 911".*

Recording Your Message



- From the Home Screen, type your Admin password then press  to enter the Programming Menu.

- Scroll to 'Recording' then press 

- Get prepared with your message, then press any key on the Main Panel to begin recording.

- You have 10 seconds, each red bar = one second.

- The recording automatically saves. Press  to return to the Programming Menu or Home Screen. Refer to Section 1.6 for information on calls to and from the panel & to learn how to hear your recording.

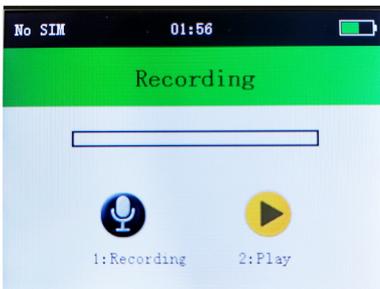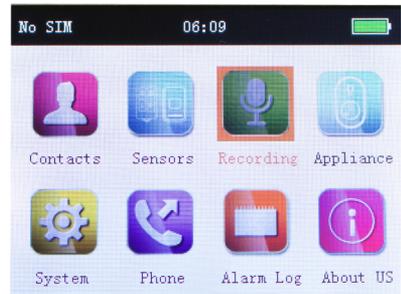



Section 1.6: Telephone Controls

1.6.1 Remote Control via Telephone

- The Total Security system can be controlled remotely from any telephone or mobile phone by calling into the SIM card phone number installed in the Main Panel.

Calling the Main Panel

- From your phone, dial the number of the SIM card installed in the Main Panel. The Panel will auto-answer after one ring (to change this see Section 2.3.6 under "Ring Times")

- You will be asked to enter your password, this is asking for your 6-digit Admin Password. Enter each number slowly, wait to press the next number until you hear the operator repeat the number you just pressed.

- After entering your password you will hear "password successfully programmed", you can now control your system using the keypad on your phone. Refer to example phone screen below.



	Arm		1-Way Intercom ON		Outlet Master ON
	Disarm		1-Way Intercom OFF		Outlet Master OFF
	2-Way Intercom ON		Siren ON		Exit & Hang Up
	2-Way Intercom OFF		Siren OFF		See Below

Smart Outlet Control

- From a telephone, Smart Outlets can be controlled 2 ways. First, as above, by pressing 9 or 0 on your keypad you can turn ALL Outlets ON, or ALL Outlets OFF. Follow below to control Outlets Individually.

- After entering your password press  to enter Outlet Selection Mode.

- Now enter the Outlet Number from 01-20 (2 digit format) for the Outlet you want to control.

- Press 1 to turn the Outlet ON.

- Press 0 to turn the Outlet OFF.



Custom Message

- *Designed for Self Monitored systems, you can record up to 10 seconds of audio to be played when your system calls you letting your contact list know that an alarm is going off. Rather than a silent line for example, say something like "Fortress Alarm System, Contact Admin or Call 911".*

Recording Your Message


- From the Home Screen, type your Admin password then press  to enter the Programming Menu.

- Scroll to 'Recording' then press .

- Get prepared with your message, then press any key on the Main Panel to begin recording.

- You have 10 seconds, each red bar = one second.

- The recording automatically saves. Press  to return to the Programming Menu or Home Screen. Refer to Section 1.6 for information on calls to and from the panel & to learn how to hear your recording.

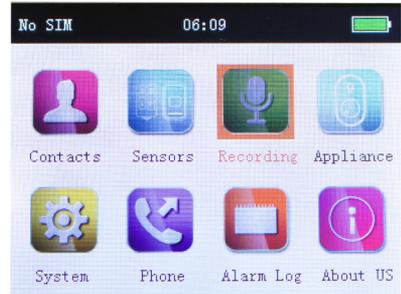



Section 1.7: Volume & Key Tone

Volume

- You can adjust both the Volume level of the Main Panels internal siren & the Volume of the Voice Prompt feature.

Adjusting Volume



- From the Home Screen, type your Admin password then press  to enter the Programming Menu.

- Scroll to 'System' then press 

- Scroll down to 'Volume' then press 

- Adjust the Voice Prompt Volume up or down using numbers 1-7. Press 

- Adjust the Main Panels internal alarm Volume up or down using numbers 1-7. Press  to Save.

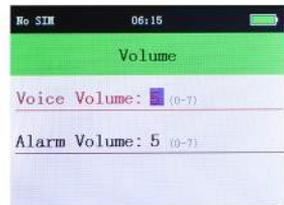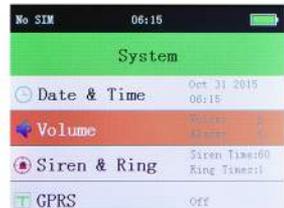

Key Tone

- You can turn the Key Tone off so the Main Panel does not beep everytime you press a button.

- From the 'System' Menu, scroll down to 'Key Tone', press .

- Press  to toggle the 'ON/OFF' switch from 'ON' to 'OFF' or vice versa.






Screensaver

- The Main Panel has a Screensaver to help reduce power consumption & prolong the life of the screen. It has six (6) settings, 30 seconds, 1, 2, 5, & 10 minutes, & Never (keeps screen on at all, keypad locks after 15 seconds).

Adjusting Screensaver Duration

- To adjust the Screensaver time, from the Home Screen type your Admin password and press .
- Scroll to 'System' then press .
- Scroll down to "Screensaver", press .

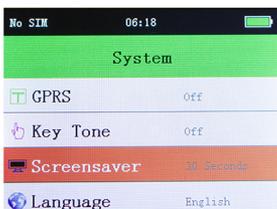

- Use / to scroll through the time options, use to toggle your desired length of time.

- Press to Save.

Wallpaper

Changing the Home Screen Wallpaper

- The Wallpaper image on the Home Screen is customizable between four (4) pre-loaded images.

- To change the Wallpaper, from the Home Screen type your Admin password and press .

- Scroll to 'System' then press .

- Scroll down to 'Wallpaper', press .

- Use / to highlight the image you prefer, press to select & save.





Section 2.1.1: Programming Door/Window Contacts

Programming

- From the Home Screen, type your Admin password then press
- Scroll to 'Sensors', press
- Scroll to 'Sensor', press


Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press then press on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press
- You will hear "Add '#' zone"

Trigger the Sensor

- If you haven't done so, remove the battery strip to trigger the Contact, or separate it from the magnet.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press to save.
- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg. 38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press to save.
- On zones 11-50 & 53-99, after choosing Event Code, press to save.
- You can now add additional sensors or press the to return to the home screen to test your sensor.
- Arm your system with the Remote Fob & trigger the sensor to make sure it is performing as you expected.

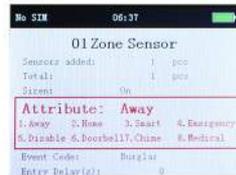

Section 2.1.2: Programming Motion Detectors



Programming

- From the Home Screen, type your Admin password then press

- Scroll to 'Sensors', press

- Scroll to 'Sensor', press

Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press then press on 'Add/Edit'.

- If you want to create a new zone, scroll to the next empty zone & press

- You will hear "Add '#' zone"

Trigger the Sensor

- To trigger the motion detector, turn the 'ON/OFF' switch on the back of the motion detector to 'ON'.

- You will hear "Add successfully programmed"

- If you added this sensor to an existing zone, press to save.

- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.

- Press , refer to pg.38 for help in choosing an Attribute.


- Press , refer to pg.38 for help in choosing an Event Code.

- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press to save.

- On zones 11-50 & 53-99, after choosing Event Code, press to save.

- You can now add additional sensors or press the to return to the home screen to test your sensor.

- Arm your system with the Remote Fob & trigger the sensor to make sure it is performing as you expected.

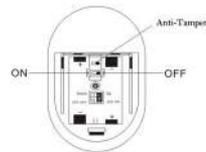



Section 2.1.3: Programming Pet Immune Motion Detectors

Programming

- From the Home Screen, type your Admin password then press .
- Scroll to 'Sensors', press .
- Scroll to 'Sensor', press .

Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press  then press  on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press .
- You will hear "Add '#' zone"

Trigger the Sensor

- Turn the 'ON/OFF' switch to 'ON'. Press & hold the black button on top of the motion detector until the red light flashes. Press the black button again.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press  to save.
- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg.38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press  to save.
- On zones 11-50 & 53-99, after choosing Event Code, press  to save.
- You can now add additional sensors or press the  to return to the home screen to test your sensor.
- Arm your system with the Remote Fob & trigger the sensor to make sure it is performing as you expected.



Section 2.1.4: Programming Glass Break Sensors



Programming

- From the Home Screen, type your Admin password then press .
- Scroll to 'Sensors', press .
- Scroll to 'Sensor', press .



Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press  then press  on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press .
- You will hear "Add '#' zone"

Trigger the Sensor

- Plug the power cord into the Glass Break Sensor. Clap your hands in front of the Glass Break Sensor, both lights should light up.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press  to save.
- **If you created a new zone for this sensor, complete the following steps**

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg.38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press  to save.
- On zones 11-50 & 53-99, after choosing Event Code, press  to save.
- You can now add additional sensors or press the  to return to the home screen to test your sensor.
- Arm your system with the Remote Fob & trigger the sensor to make sure it is performing as you expected.

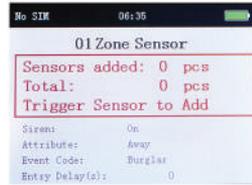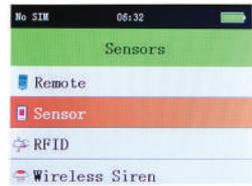



Section 2.1.5.1: Programming Multi-Gas Leak Detectors

Programming

- From the Home Screen, type your Admin password then press
- Scroll to 'Sensors', press
- Scroll to 'Sensor', press

Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press then press on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press
- You will hear "Add '#' zone"

Trigger the Sensor

- Plug the Gas Leak Detector into power. Press the black 'Test' button on the side of the Gas Leak Detector. The Detector will beep.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press to save.
- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg.38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press to save.
- On zones 11-50 & 53-99, after choosing Event Code, press to save.
- You can now add additional sensors or press the to return to the home screen to test your sensor.
- Press the black 'Test' button on the side of the Gas Leak detector to test weekly.



Section 2.1.5.2: Programming Carbon Monoxide (CO) Detectors



Programming

- From the Home Screen, type your Admin password then press .
- Scroll to 'Sensors', press .
- Scroll to 'Sensor', press .


Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press  then press  on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press .
- You will hear "Add '#' zone"

Trigger the Sensor

- Remove the battery tab, then press & hold the 'Test' button on the front of the CO detector until you hear the Main Panel speak.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press  to save.
- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg.38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press  to save.
- On zones 11-50 & 53-99, after choosing Event Code, press  to save.
- You can now add additional sensors or press the  to return to the home screen to test your sensor.
- Press the 'Test' button on front of the CO detector to test the detector weekly.

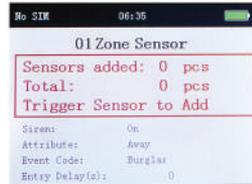



Section 2.1.6: Programming Smoke Detectors

Programming

- From the Home Screen, type your Admin password then press

- Scroll to 'Sensors', press

- Scroll to 'Sensor', press

Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press then press on 'Add/Edit'.

- If you want to create a new zone, scroll to the next empty zone & press

- You will hear "Add '#' zone"

Trigger the Sensor

- Remove the plastic wrapper from the battery. Press & hold the 'Test' button on the front of the Smoke Detector until it beeps.

- You will hear "Add successfully programmed"

- If you added this sensor to an existing zone, press to save.

- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.

- Press , refer to pg.38 for help in choosing an Attribute.

- Press , refer to pg.38 for help in choosing an Event Code.




- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only.

Press to save.

- On zones 11-50 & 53-99, after choosing Event Code, press to save.

- You can now add additional sensors or press the to return to the home screen to test your sensor.

- Press the 'Test' button on front of the Smoke detector to test the detector weekly.

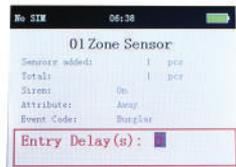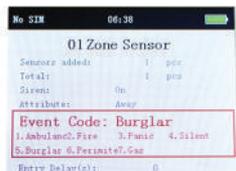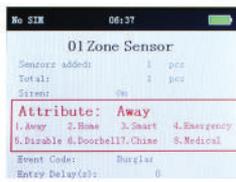

Section 2.1.7: Programming Panic Buttons



Programming

- From the Home Screen, type your Admin password then press .

- Scroll to 'Sensors', press

- Scroll to 'Sensor', press

Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press then press on 'Add/Edit'.

- If you want to create a new zone, scroll to the next empty zone & press

- You will hear "Add '#' zone"

Trigger the Sensor

- Press the Panic Button.

- You will hear "Add successfully programmed"

- If you added this sensor to an existing zone, press to save.

- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.

- Press , refer to pg.38 for help in choosing an Attribute.

- Press , refer to pg.38 for help in choosing an Event Code.



- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only.

Press to save.

- On zones 11-50 & 53-99, after choosing Event Code, press to save.

- You can now add additional sensors or press the to return to the home screen to test your sensor.

- To test, arm your system if necessary, the press the Panic Button.

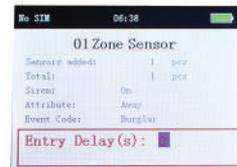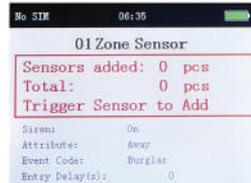



Section 2.1.8: Programming Smart Outlets

Programming

- From the Home Screen, enter the Admin Password then press 
- Scroll to 'Appliance', press 
- Press  on 'Outlet List'.
- Scroll to the Outlet number to be added.
- Plug the Smart Outlet in, then press & hold the Power Button until the light goes out.
- On the Main Panel, with the Outlet number highlighted press  to toggle the 'ON/OFF' switch on the screen, the light on the outlet will flash.



- Press the Power Button on the outlet to Exit programming mode. The Smart Outlet is now programmed.

- On the Main Panel, press  twice to return to the Programming Menu. Scroll to 'Sensors', press 



- Scroll to 'Wireless Outlet', press 



- Press  on 'Wireless Outlet' to toggle the switch to 'ON'. The Smart Outlet will turn on.



- To test, plug a lamp into the outlet and turn the lamp on. On your Main Panel, return to the 'Outlet List', select the Outlet number you just programmed. Press  to toggle the switch to 'OFF'. The Smart Outlet should turn off, causing the lamp to turn off.

- Now you are ready to use your Smart Outlet. Plug the Smart Outlet into any power outlet and plug the device you would like to control into the Smart Outlet.

Section 2.1.9: Programming Water Sensors



Programming

- From the Home Screen, type your Admin password then press .
- Scroll to 'Sensors', press .
- Scroll to 'Sensor', press .

Pick A Zone


- If you are adding to an existing zone, scroll to the zone # you want to add to & press  then press  on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press .
- You will hear "Add '#' zone"

Trigger the Sensor


- If you haven't done so, remove the battery strip & then lift the Float.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press  to save.

- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg.38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press  to save.
- On zones 11-50 & 53-99, after choosing Event Code, press  to save.
- You can now add additional sensors or press the  to return to the home screen to test your sensor.
- Arm your system with the Remote Fob & trigger the sensor to make sure it is performing as you expected.

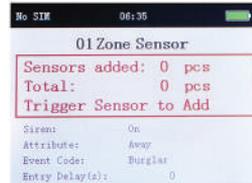

Float

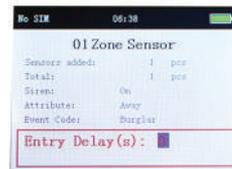



Section 2.1.10: Programming Vibration Sensors

Programming

- From the Home Screen, type your Admin password then press .
- Scroll to 'Sensors', press .
- Scroll to 'Sensor', press .

Pick A Zone




- If you are adding to an existing zone, scroll to the zone # you want to add to & press  then press  on 'Add/Edit'.
- If you want to create a new zone, scroll to the next empty zone & press .
- You will hear "Add '#' zone"

Trigger the Sensor

- Shake the 'Detector Portion' back & forth.
- You will hear "Add successfully programmed"
- If you added this sensor to an existing zone, press  to save.

- If you created a new zone for this sensor, complete the following steps

- Press , press 1 if you want this zone to set off the siren, press 2 if you want this zone to be silent when triggered.
- Press , refer to pg.38 for help in choosing an Attribute.
- Press , refer to pg.38 for help in choosing an Event Code.
- On zones 1-10, press down and set a zone specific delay (pg.38), on zones 51/52 the last setting is for Wired Sensors only. Press  to save.
- On zones 11-50 & 53-99, after choosing Event Code, press  to save.
- You can now add additional sensors or press the  to return to the home screen to test your sensor.
- Arm your system with the Remote Fob & trigger the sensor to make sure it is performing as you expected.

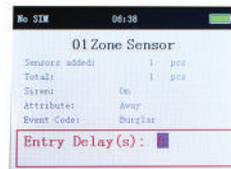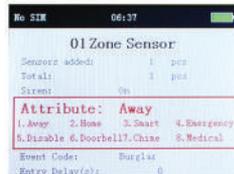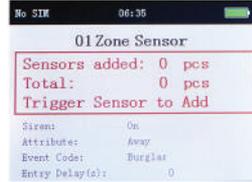

Section 2.2.1: Programming RFID Keypads



Programming

- From the Home Screen, type your Admin password then press .

- Scroll to 'Sensors', press .

- Scroll to 'Remote', press .




Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press .

- If you want to create a new zone, scroll to the next empty zone & press  then press  on 'Add/Edit'.

- You will hear "Add '#' zone"

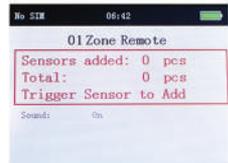

Trigger the Sensor

- On the Keypad, type its default password (123456) then press the  button.

- You will hear "Add successfully programmed"

- If you added this Keypad to an existing zone, press  to save.


- If you created a new zone for this Keypad, complete the following steps



- Press , press 1 if you want the siren to chirp when arming/disarming, press 2 if you want the siren to be silent when arming/disarming. Press .

- You can now add additional Remotes/Keypads or press the  to return to the home screen to test your Keypad.

- To test, from the Keypad you just added, enter the 6 digit Keypad password then press the . Your system will begin Arming. Enter the password again then press  on the Keypad to Disarm your system.

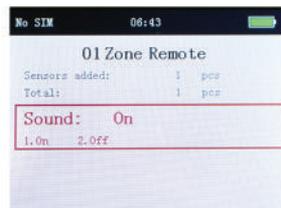

'Lock'
Arms System

'Stay'
Home Arm

'Unlock'
Disarms System

'SOS'
Panic Button



Section 2.2.2: Programming RFID Keytags

RFID Keytags can be programmed to the Main Panel & to the Second Keypad. First we will cover programming keytags to the Main Panel, then we will cover adding keytags to Second Keypads.

Programming



Main Panel

- From the Home Screen, type your Admin password then press .

- Scroll to 'Sensors', press .


- Scroll to 'RFID', press .

- Each zone only holds one RFID Keytag. Scroll to the next empty zone and press .

- While 'Add RFID' is selected, pass the RFID Keytag you want to add in front of the Main Panel. 'Empty' will change to 'Added'. Scroll down.

- Press  to toggle the switch 'ON', this will enable the Keytag to disarm the Main Panel.

- If you would like to receive SMS alerts when this RFID keytag disarms the Panel, Scroll down and press  to toggle the 'SMS Notice' toggle to 'ON'. Press  to Save & Exit.

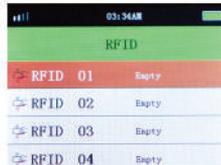

Second Keypad

- The Second Keypad has 40 zones that allow for one (1) RFID Keytag each.

- Enter the 6-digit password for the Second Keypad followed by #. By default the password is 123456, so you would type 123456#.

- The LED light will turn Blue.

- With the LED light Blue, enter the zone number, from 1-40, you want to add an RFID tag to in 3 digit format followed by #. For example if you are adding to zone 3, you would enter '003#'

- Swipe the RFID Keytag in front of the Keypad. The Keypad will beep. Press '*', then '#' to Exit programming.

- To delete RFID Keytags, enter the 6-digit Keypad password, followed by '#1' & then the 2-digit zone number for the RFID Keytag you want to delete. Example: '123456#103' will delete RFID Keytag zone 3 and leave the other Keytags programmed. To delete all RFID Keytags at once, enter '123456#1**'. Press '*' then '#' to exit.





Section 2.2.3: Programming Remote Key Fobs

Programming

- From the Home Screen, type your Admin password then press .

- Scroll to 'Sensors', press .

- Scroll to 'Remote', press .




Pick A Zone

- If you are adding to an existing zone, scroll to the zone # you want to add to & press .

- If you want to create a new zone, scroll to the next empty zone & press  then press on 'Add/Edit' .

- You will hear "Add '#' zone"

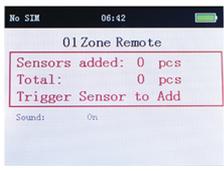

Trigger the Sensor

- Press any button on the Remote.

- You will hear "Add successfully programmed"

- If you added this Remote to an existing zone, press  to save.





- If you created a new zone for this Remote, complete the following steps

- Press , press 1 if you want the siren to chirp when arming/disarming, press 2 if you want the siren to be silent when arming/disarming. Press .

- You can now add additional Remotes/Keypads or press the  to return to the home screen to test your Remote.


- To test your Remote press any button on the Remote.

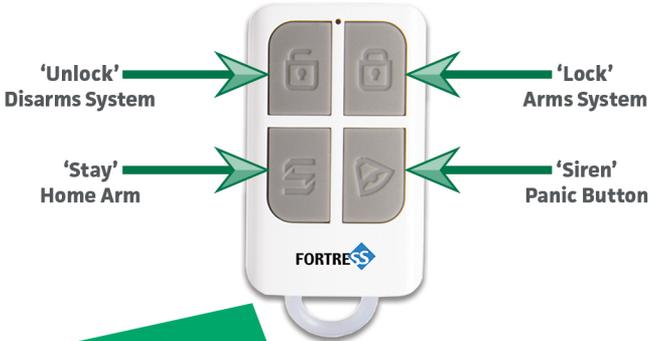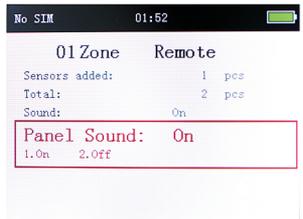



Section 2.3.1: Plugging in White Sirens

- The White Siren does not require programming.
- If your panel is mounted on a wall, remove it from its bracket (this will cause the tamper switch to set the alarm off, silencing alarms may be a good idea, see pg...).
- Remove the back panel door, then plug the White Siren cord into the 'Siren' port.

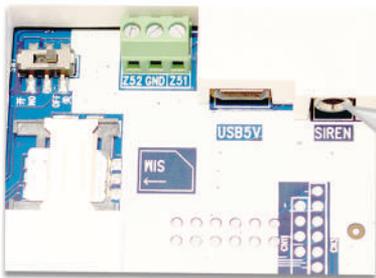


- To test, return to the Home Screen & then press the panic button on your Remote. The Siren should go off, press disarm on the remote to quit testing.

Section 2.3.2: Programming Plug-In Strobe Sirens



Programming

- From the Home Screen, type your Admin password then press 
- Scroll to 'Sensors', press 
- Scroll down to 'Wireless Siren', press 
- Turn the 'ON/OFF' switch on, back of the siren, to 'ON'.
- Press and hold the 'Set' button on the siren until the siren beeps and its light comes on.
- On your Main Panel, with the wireless siren toggle selected, press  to toggle the switch 'ON'.

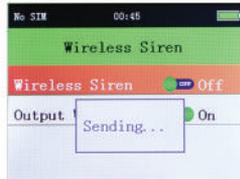

- Press the 'Set' button on the siren again. The siren will beep and the light will go off. The siren is now programmed.
- To test, return to the Home Screen & then press the panic button on your Remote. The Siren should go off, press disarm on the remote to quit testing.
- Plug the siren into an outlet, leave the 'ON/OFF' switch 'ON', this charges the backup battery in case of a power outage.





Section 2.3.3: Programming Strobe Sirens

Programming

- From the Home Screen, enter the Admin Password then press


- Scroll to 'Sensors', press

- Scroll down to 'Wireless Siren', press

- Turn the 'ON/OFF' switch on the back of Strobe Siren to 'ON'.

- Press the coding button on the back of the Strobe Siren. The siren will beep.

- On the Main Panel, with the 'Wireless Siren' toggle selected, press to turn it 'ON'. The Siren will beep again.

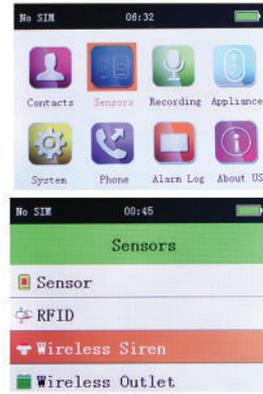

- Turn the Siren OFF for 3 seconds, then turn it back ON. The Siren is now programmed.

- To test, return to the Home Screen & then press the panic button on your Remote. The Siren should go off, press disarm on the remote to quit testing.

- Plug the power cord in & mount your siren. Refer to page 14 in Part One: Installation Guide formounting instructions.




Section 2.3.4: Programming Solar Sirens



Programming

- From the Home Screen, enter the Admin Password then press
- Scroll to 'Sensors', press
- Scroll down to 'Wireless Siren', press
- Turn the 'ON/OFF' switch on the back of Solar Siren to 'ON'.
- Press & hold the 'Volume' button on the back of the Solar Siren until the siren beeps.
- On the Main Panel, with the 'Wireless Siren' toggle selected, press to turn it 'ON'. The Siren will beep again.

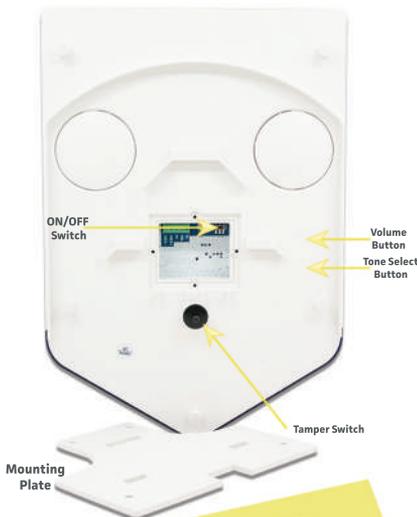

- Press the 'Tone Select' button on the back of the Solar Siren. The siren will beep & the light will go off.
- To test, return to the Home Screen & then press the panic button on your Remote. The Siren should go off, press disarm on the remote to quit testing.
- Use the 'Volume' & 'Tone Select' buttons to set the volume & siren tone, then mount the siren. Refer to page 15 in Part One: Installation Guide for tips on installation.



Section 2.3.5: Programming Black Sirens


Programming

- From the Home Screen, enter the Admin Password then press 

- Scroll to 'Sensors', press 

- Scroll down to 'Wireless Siren', press 

Pay close attention during the next steps, you are listening for 3 beeps, it may happen the first or second time you plug the siren in. If you hear 3 beeps after the first or second plug-in, move on to Step 7

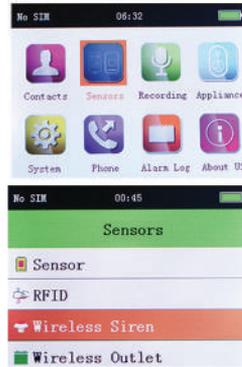

- Plug the siren in, you will hear 2 beeps. Unplug the siren for 2 seconds.

- Plug the siren in again, you will hear 2 more beeps. Unplug the siren for 2 seconds.

- Plug the siren in a third time, you will hear 3 beeps this time. Leave the siren plugged in.

- On the Main Panel, with the 'Wireless Siren' toggle selected, press  to turn it 'ON'. The Siren will beep again.



- Unplug the siren for 3 seconds, then plug it back in. Your siren is now programmed.



Power Cable/Antenna

- To test, return to the Home Screen & then press the panic button on your Remote. The Siren should go off, press disarm on the remote to quit testing.

- Refer to page 16 in Part One: Installation Guide for tips & information on mounting the Black Siren.



2.3.6 Siren Duration

- Adjust the length of time (in seconds) the Siren will sound for in the event of an alarm.

Changing Siren Duration

- From the Home Screen, enter the Admin password then press
- Scroll to 'System', press
- Scroll to 'Siren & Ring', press
- Input the length of time you would like the Siren to alarm for in seconds (refer to table below for minutes/seconds conversion) press to save.



- You can test your system by returning to the Home Screen, press the Panic Button on your Remote. You can let the siren ring until it shuts itself off if you would like, or disarm with the remote when you have heard enough.

Minutes to Seconds

Minutes	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Seconds	60	120	180	240	300	360	420	480	540	600	660	720	780	840	900	960	1020	1080	1140	1200

2.3.7 Ring Time

- Set the number of times the Main Panel will ring before answering when you call into it.

Changing Ring Time


- Follow steps from *Changing Siren Duration* to get to the screen in image (above).
- Scroll down to 'Ring Times'. Input the number of times you want the panel to ring.



Section 2.4: Programming Sensors to a Signal Repeater

Programming

- The Signal Repeater does not require programming from the Main Panel.
- Plug the Signal Repeater into power.
- Press and hold the 'Study' button on the back of the Signal Repeater until the LED light turns from Green to Orange.
- Trigger the sensor you would like to add to the Signal Repeater.
- The Orange LED will flash. The sensor is programmed to the Signal Repeater.
- While the LED is Orange you can continue to add sensors. Two quick flashes of the LED light indicate the sensor has already been programmed to the Signal Repeater.
- Press the 'Study' button to exit program mode, the LED will turn Green again.

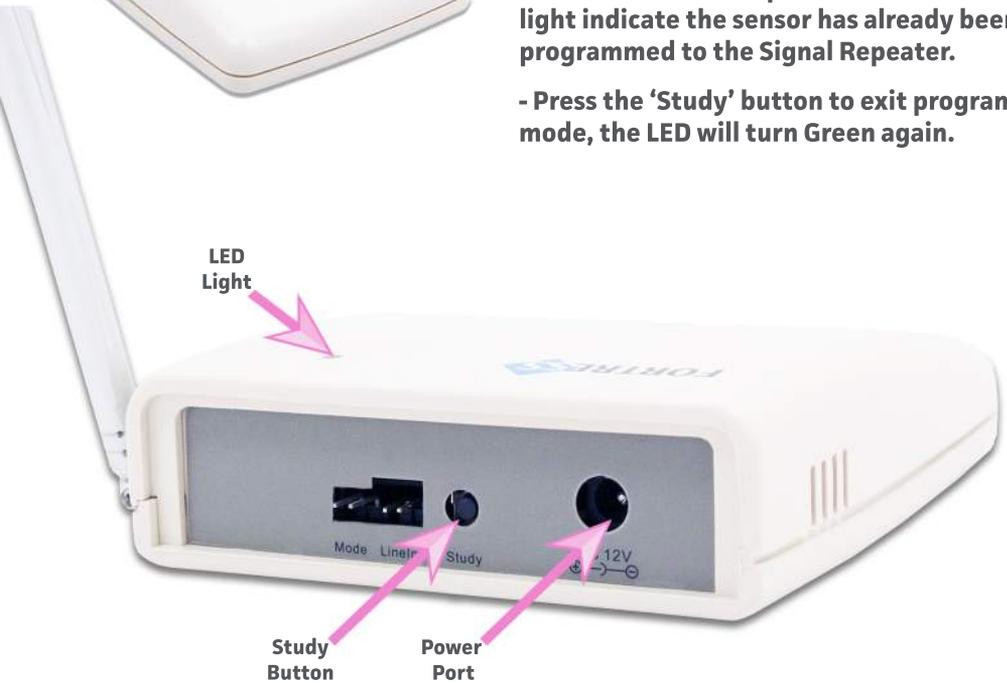




2.5 Removing Accessories

You can remove accessories easily from your Main Panel.

- From the Home Screen, type your Admin password then press .
- Scroll to 'Sensors', press .
- Scroll to 'Remote', 'Sensor', or 'RFID' & press .
- Scroll to the zone you want to delete (if more than one accessory is on the zone, they will all be deleted) Press .
- Highlight 'Delete', press .
- You will be asked to confirm, highlight 'Yes', press .
- Repeat for other sensors, remotes & rfid keytags.

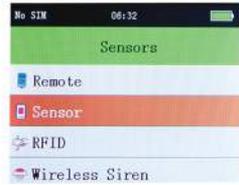

2.6 Factory Reset

Want to start fresh? Follow these steps to return your Total Security Main Panel to factory defaults.

- From the Home Screen, enter your Admin Password then press .
- Scroll to 'System', press .
- Scroll up once to 'Restore Factory Defaults', press .
- From this menu, you can delete remotes, sensors, & RFID tags all at once, or each group individually. The last option 'restore factory defaults' will erase all accessories, including sirens & outlets, as well as return passwords & all other settings back to default.
- Use  to select/deselect options then press , you will be asked to confirm.





Section 3: Ready-to-Arm Mode

Ready-to-Arm

- Ready-to-Arm is a feature that when enabled will tell you if a Door/Window Contact Sensor is not closed and will not allow you to Arm the system until your property is fully secure.

Enabling Ready-to-Arm

- To enable Ready-to-Arm mode, from the Home Screen type your Admin password and press .

- Scroll to 'Sensors' then press .

- Scroll down to 'Ready-to-Arm', press , the toggle switch will turn from 'OFF' to 'ON' and vice versa.





4.1 Entry/Exit Delays

- *Entry/Exit Delays are intended to be used to help reduce false alarms while entering/exiting your property. This section covers general entry/exit delays, for zone specific Entry Delay Only, see page 37.*

Setting Delays



- From the Home Screen enter the Admin password & press

- Scroll to 'System' then press

- Press on 'Delay'

- You will see 'Arming Delay(s)' highlighted, this is for when you leave your property, enter the desired amount of time in seconds you want your system to delay arming. Press & enter the amount of time you want your system to delay setting off the alarm upon entering your property to disarm.

- Press to Save and return to the 'System' menu where you are able to review the Delay setting you just saved.

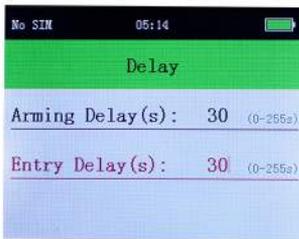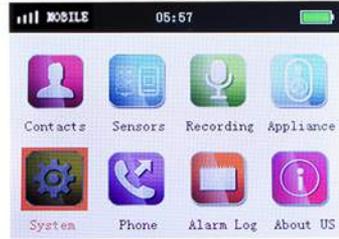





Section 4.2: Setting Zone Specific Delays

4.2 Zone Specific Delays (custom delays)

- On the previous page you learned about Entry/Exit delays that will apply to all zones, this section covers Zone Specific Delays, or 'Custom Delays'. Custom Delays can be set ONLY on zones 1-10. With a Custom Delay set, the Entry delay set in section 4.1 will be overridden by that zones Custom Delay. Custom Delays only affect the zone it is applied to.

Custom Delays: Zone 1-10

- From the Home Screen, enter the Admin Password then press 
- Scroll to 'Sensors', press 
- Scroll down to 'Sensor', press 
- Custom Delays can only be set on zones 1-10. Select the zone you want to create a Custom Delay on & press
- On the pop-up menu, press  on 'Add/Edit'
- Scroll down to 'Entry Delay'
- Enter a any number from 0-255, this will be the amount of time in seconds the zone will delay before triggering the alarm.
- Press  to Save.

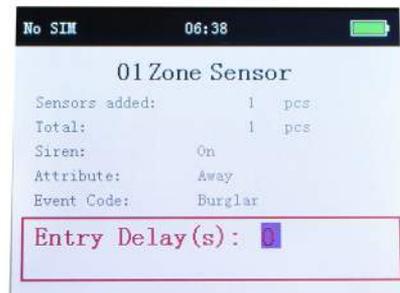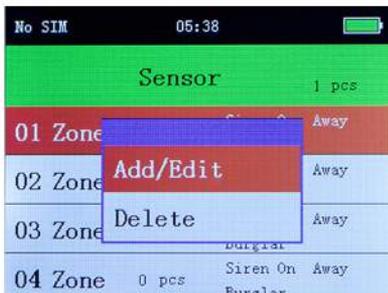



5.1 Attributes/Event Codes

- When programming sensors you need to choose a zone Attribute & Event Code for each zone depending on the type of sensor. Attributes tell the Panel to respond depending on the Armed status, & Event Codes help you and the monitoring company identify the level of emergency.

- To edit Attribute/Even Codes, from your Home Screen, enter your Admin password then press

- Select 'Sensors' then press

- Scroll down to 'Sensor' then press

- Select the Zone # you would like to edit. Press twice.

- Press twice.

- Press the number that matches the Attribute you would like for that zone. Press

- Press the number that matches the Event Code you would like for that zone. Press to save.



Attributes

Attribute: Instant

1. Instant 2. Home 3. Smart 4. Emergency
5. Disable 6. Doorbell 7. Chime 8. Medical

Instant: Arms sensors instantly in both Armed & Stay mode. Recommended for Door/Window Contact Sensors.

Home: Arms sensors only while you are Away. Recommended for motion sensors or sensors you don't want going off while you are home.

Smart: This feature requires the sensor to be triggered two times within 3 seconds. Great for reducing false alarms caused by motion detectors.

Emergency: Sensors trigger alarm even when your system is Disarmed. Recommended for Panic Button.

Disable: Sensor will NOT trigger the alarm in any mode.

Doorbell: Produces a doorbell ring from your main panel in any mode. Recommended for converting your Panic Button to a real Doorbell.

Chime: Produces a chime while in Stay mode. Be alerted when someone comes through the door without setting off the alarm.

Medical: Sensor will trigger in all modes but will not sound the Alarm. Recommended for use with Panic Button as emergency 'life-line'.

Event Codes

Event Code: Burglar

1. Ambulance 2. Fire 3. Panic 4. Silent
5. Burglar 6. Perimeter 7. Gas

Ambulance: For use with 'Medical' attribute, alerts monitoring center of medical emergency.

Fire: For use with 'Emergency' attribute, specifically zones with Smoke Detectors.

Panic: For use with 'Emergency' attribute, specifically Panic Buttons. Alerts monitoring company of a very urgent situation.

Silent: For use with 'Emergency' attribute, specifically Panic Buttons. Alerts monitoring company of a very urgent situation.

Burglar: For use with 'Instant, Home, & Smart' attributes. Alerts monitoring company that a sensor has been set off.

Perimeter: For use with many attributes, recommended for use with Water Sensors and Vibration Sensors.

Gas: For use with 'Emergency' attribute, specifically Gas Leak Detectors. Alerts monitoring company of a Gas Leak.



Section 6: Event Monitoring

6.1 Power Failure Notifications

The Total Security Main Panel can notify you in the event of a power outage so you can act before it's too late.

- From the Home Screen, enter your Admin Password then press .

- Scroll to 'System', press .

- Scroll to 'Power Failure Notifications', press .

- You can monitor power settings for four options, Panel Power Off, Panel Power On, Panel Battery Low, & Sensor Battery Low. For each setting you can choose any combination of Voice, Siren, SMS, or Call as the form of notification. Press  to select options.

- Panel Power Off: when selected, the Main Panel will alert you when power from the outlet is lost and the Panel switches to battery power.

- Panel Power On: when selected, the Main Panel will alert you when power from the outlet is regained.

- Panel Battery Low: when selected, if the Main Panel is using backup battery power, you will be alerted when the battery level is low.

Notification Options


- Sensor Battery Low: when selected, the Main Panel will alert you when one of your sensor batteries are low.

- Voice: when selected, the Main Panel will alert you with Voice Prompt over the built in speaker.

- Siren: when selected, the Main Panel will alert you by setting off the siren.

- SMS: when selected, the Main Panel will send you a text message detailing the power failure.

- Call: when selected, the Main Panel will call the phone numbers in the panel, as well as Voice/Siren/SMS all at once.

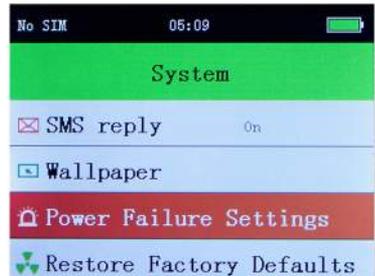

6.2 Text Notifications

The Total Security Main Panel can notify you via SMS text when the system is Armed, Disarmed, or Armed in Home mode.

- From the Home Screen, enter your Admin Password then press .

- Scroll to 'System', press .

- Scroll to 'Arm/Disarm SMS', press .

- Press  to check the box.

- Arm SMS Notice: when selected, the Main Panel will send you a text every time the system is Armed.

- Disarm SMS Notice: when selected, the Main panel will send you a text every time the system is Disarmed.

- Home SMS Notice: when selected, the Main Panel will send you a text every time the system is Armed in Home mode.



6.3 Alarm Log

View a log of arming history, alarm history, and rfid access.

- From the Home Screen, enter your Admin Password then press .

- Scroll to 'Alarm Log', press .

- To view the history, highlight & press .






Section 7.1: Mobile App - Getting Started





Android

To download and install the free mobile app for the Total Security Wifi system, open the Google Play Store app on your Android device, and search for "Fortress Total Security WiFi."

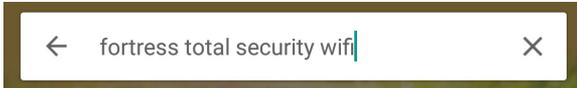

Tap on the green "Install" button and follow the prompts to install the app. Once installed, it will appear in your device's app list.

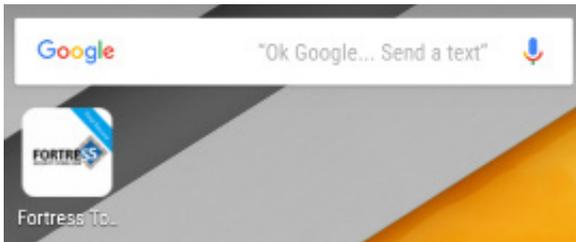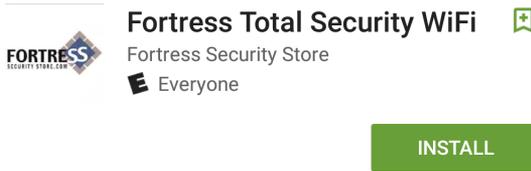

Tap on the app's icon to launch the app from your device's home screen or app list.

 Do not use the app while driving.

Section 7.1: Mobile App - Getting Started



iPhone

To download and install the free mobile app for the Total Security Wifi system, open the Apple App Store app on your iPhone, and search for "Fortress Total Security WiFi."



Once installed, the app will appear in your home screen, and you can launch the app by tapping on its icon.



 **Do not use the app while driving.**



Section 7.1: Mobile App - Getting Started




Android

The Total Security WiFi system has two methods of communicating with the mobile app: over WiFi (and the Internet), or by using GSM Mode, via text messages over the cellular phone network (SIM card activation required).

To use the app over WiFi / the Internet, tap on the “WiFi” icon.
To use text messages (GSM Mode), tap the “SMS” icon.

For the first-time login, tap on ‘Register’ and select ‘Email Register’ (below the ‘Get Verification Code’ button). After the first login, the app will remember your information unless you log out. Never share your password with anyone.

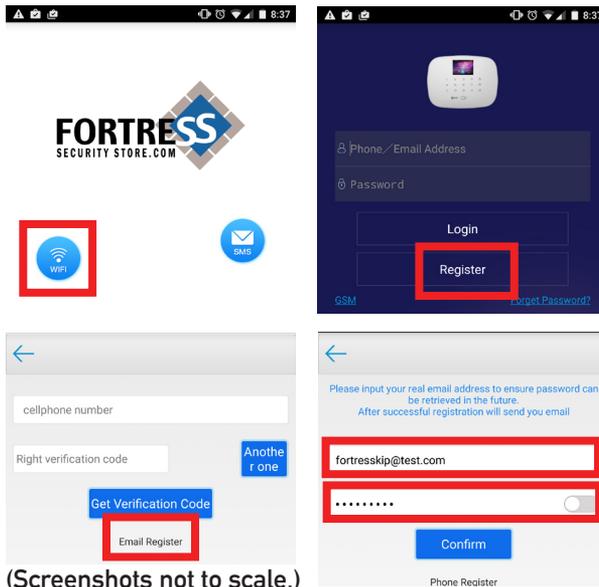

Section 7.1: Mobile App - Getting Started




iPhone

The Total Security WiFi system has two methods of communicating with the mobile app: over WiFi (and the Internet), or by using GSM Mode, via text messages over the cellular phone network (SIM card activation required).

To use the app over WiFi / the Internet, tap on the “WiFi” icon.

To use text messages (GSM Mode), tap the “SMS” icon.

For the first-time login, tap on ‘Sign Up,’ and enter an email address and password. After the first login, the app will remember your information unless you log out. Never share your password with anyone.

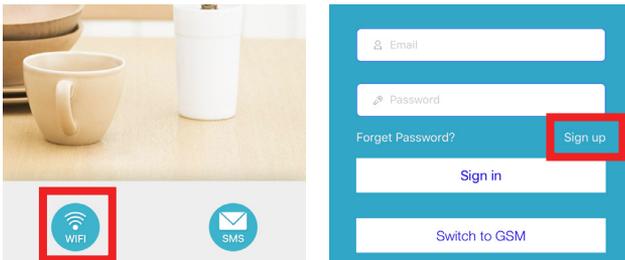

Please input your real email address to ensure password can be retrieved in the future, After successful registration will send you email




(Screenshots not to scale.)



Android

Once registered, you'll be taken to a screen that shows any detected Total Security WiFi panels that are turned on and in range. You can then tap on "LAN online" to launch the dashboard for that alarm panel. Each alarm panel has a unique identifying code. If you have more than one panel you can control each of them from the same app.

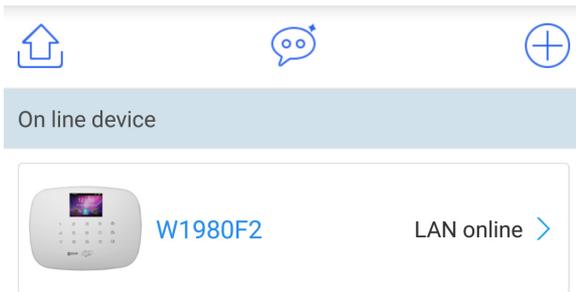


The mobile app allows us to control many different aspects of the alarm system, almost as if we are standing in front of the panel directly. On the following pages are a detailed breakdown of each of the menus, buttons, and settings available in the mobile app.

Once you tap "LAN online" above, you'll be taken to the dashboard for that alarm panel. Pictures of the dashboard are on the next page.



iPhone

Once registered, you'll be taken to a screen that shows any detected Total Security WiFi panels that are turned on and in range. You can then tap on "LAN" to launch the dashboard for that alarm panel. Each alarm panel has a unique identifying code. If you have more than one panel you can control each of them from the same app.

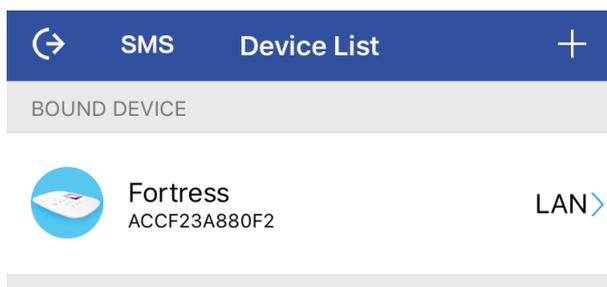

The mobile app allows us to control many different aspects of the alarm system, almost as if we are standing in front of the panel directly. On the following pages are a detailed breakdown of each of the menus, buttons, and settings available in the mobile app.

Once you tap "LAN online" above, you'll be taken to the dashboard for that alarm panel. Pictures of the dashboard are on the next page.



Section 7.2: Mobile App - Dashboard



Android

The dashboard allows you to control many features from one handy location. The most commonly used buttons will likely be the “Disarm,” “Arm,” and “Stay Arm” buttons which can immediately arm and disarm the alarm when tapped.

WiFi Main Dashboard

Menu Dropdown



User Selection



Scheduled Socket



Alarm Phone



Alarm logs



Area Setting

Settings / Logs

Main View Tabs

Smart Socket Remote Monitoring

(Remote Monitoring not pictured on this page)



the 1 group:



the 2 group:



Smart Outlet Controls



the 3 group:



the 4 group:



Disarm



Arm



Stay Arm

Arming Buttons

Section 7.2: Mobile App - Dashboard



iPhone

The dashboard allows you to control many features from one handy location. The most commonly used buttons will likely be the “Disarm,” “Arm,” and “Stay Arm” buttons which can immediately arm and disarm the alarm when tapped.

WiFi Main Dashboard

Menu Dropdown



User Selection



Outlet



Number



Alarm Log



Zone Name

Settings / Logs

Main View Tabs

Monitor

Smart Home

(Smart Home not pictured on this page)

Click to Add Monitor



Remote Monitoring for Cameras



Arm



DisArm



Stay Arm

Arming Buttons



Android

The Arming Buttons allow you to control the system's current status. Whichever icon is highlighted tells you the status of the system at that time.



Disarm



Arm



Stay Arm

This indicates that the system is currently disarmed.

Tapping on an icon once will immediately change the status of the system. (If there is an Exit Delay in the system, tapping the Arm button will start the Exit Delay countdown. The system will then be armed after the countdown is finished.)

The Settings / Logs icons open up menus that control various things about how the system works.



Scheduled Socket



Alarm Phone



Alarm logs



Area Setting

Scheduled Socket

Controls the schedule for the Smart Outlets

Alarm Phone

Allows you to edit any stored phone number(s)

Alarm Logs

Allows you to view the Alarm Log history

Area Setting

Allows you to nickname the Zone numbers in the app



iPhone

The Arming Buttons allow you to control the system's current status. Whichever icon is highlighted tells you the status of the system at that time.



Arm



DisArm



Stay Arm

This indicates that the system is currently disarmed.

Tapping on an icon once will immediately change the status of the system. (If there is an Exit Delay in the system, tapping the Arm button will start the Exit Delay countdown. The system will then be armed after the countdown is finished.)

The Settings / Logs icons open up menus that control various things about how the system works.



Outlet



Number



Alarm Log



Zone Name

Outlet

Controls the schedule for the Smart Outlets

Number

Allows you to edit any stored phone number(s)

Alarm Log

Allows you to view the Alarm Log history

Zone Name

Allows you to nickname the Zone numbers in the app



Android



Scheduled Socket



Alarm Phone



Alarm logs



Area Setting

Scheduled Socket Controls the schedule for the Smart Outlets

← timing

Not set >

Not set >

Not set >

Not set >

← reservation

Groups: 1 >

Time: 3:00 >

on/off

repeat

Mon Tues Wed Thur Fri Sat Sun

Confirm

← timing

03:00 On The 1 group
Date: Mon Tues Wed Thur Fri

Not set >

Not set >

Not set >

Tap on a scheduled event (or an empty line) to edit (or create) an event as shown.



iPhone



Outlet



Number




Alarm Log



Zone Name

Outlet

Controls the schedule for the Smart Outlets

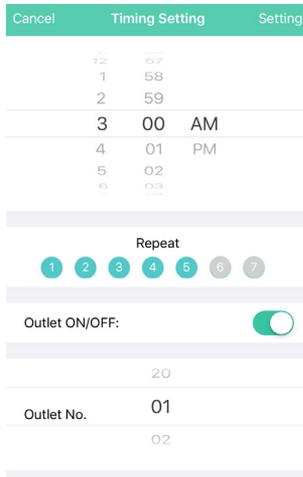

Tap on a scheduled event (or an empty line) to edit (or create) an event as shown.



Android



Scheduled Socket



Alarm Phone



Alarm logs



Area Setting

Alarm Phone

Allows you to edit the stored phone number(s) in the system.

Tap on a phone number (or an empty line) to edit (or add) a phone number as shown. To delete a phone number, swipe left from the side to get the trash icon.



iPhone



Outlet



Number



Alarm Log



Zone Name

Number

Allows you to edit the stored phone number(s) in the system.

< Fortress Alarm Number Setting	Cancel New Timing Switch Setting
Not set (click Settings) No.1	Number: <input type="text" value="15095551212"/>
Not set (click Settings) No.2	TEL: <input checked="" type="checkbox"/>
Not set (click Settings) No.3	SMS: <input type="checkbox"/>
	RFID: <input type="checkbox"/>
< Fortress Alarm Number Setting	< Fortress Alarm Number Setting
15095551212 No.1 <small>Alarm Type:TEL</small>	15551212 No.1 Delete <small>Alarm Type:TEL</small>
Not set (click Settings) No.2	Not set (click Settings) No.2
Not set (click Settings) No.3	Not set (click Settings) No.3

Tap on a phone number (or an empty line) to edit (or add) a phone number as shown. To delete a phone number, swipe left from the side to get the trash icon.



Android



Scheduled Socket



Alarm Phone



Alarm logs



Area Setting

Alarm Logs

Allows you to view the events in the system's Alarm Log.


Alarm information			
Garage Alarm	16/08/24	23:24	
Garage Alarm	16/08/24	23:18	
98 Zone Alarm	16/08/24	23:16	
98 Zone Alarm	16/08/24	23:16	
98 Zone Alarm	16/08/24	23:15	

In this example, we can see that the Zones can be named in the app. To name one or more Zones, use the Area Setting menu.

Area Setting

Allows you to name one or more Zones in the app, as shown.

Area Setting		
1	Zone Name:01	>
2	Zone Name:02	>
3	Zone Name:03	>
4	Zone Name:04	>

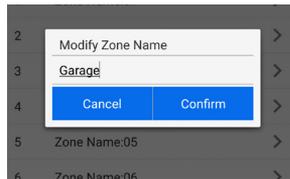

Area Setting		
1	Garage	>
2	Zone Name:02	>
3	Zone Name:03	>
4	Zone Name:04	>



iPhone



Outlet



Number



Alarm Log



Zone Name


Alarm Log

Allows you to view the events in the system's Alarm Log.



Zone Name

Allows you to name one or more Zones in the app, as shown.

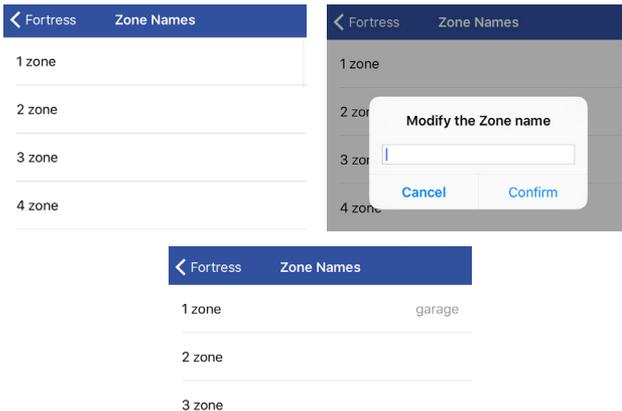




Android

In the Main View in the center of the dashboard, the two “Smart Socket” and “Remote Monitoring” tabs can be tapped to toggle and viewed one at a time.



The “Smart Socket” tab allows you to toggle the power On and Off for any Smart Outlets you may have in your system. In this example, Smart Outlet #1 is currently turned On.

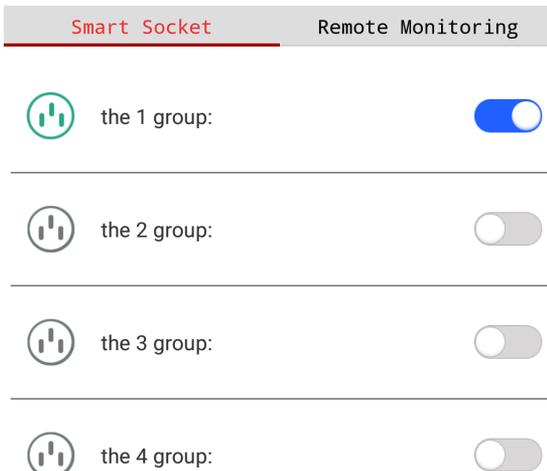

Section 7.2: Mobile App - Dashboard



iPhone

In the Main View in the center of the dashboard, the two "Smart Socket" and "Remote Monitoring" tabs can be tapped to toggle and viewed one at a time.



The "Smart Socket" tab allows you to toggle the power On and Off for any Smart Outlets you may have in your system. In this example, Smart Outlet #1 is currently turned On.






Section 7.3: Mobile App - Cameras



Android

The "Remote Monitoring" tab allows you to connect a Fortress Eyesight HD Camera and view a live feed.

To sync a camera with the app, tap on the '+' button on this tab in the Main View of the Dashboard.

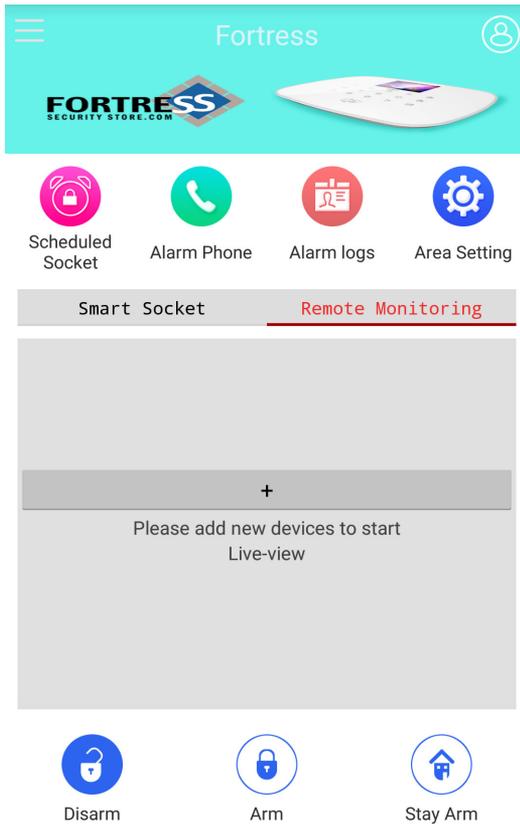




iPhone

The "Remote Monitoring" tab allows you to connect a Fortress Eyesight HD Camera and view a live feed.

To sync a camera with the app, tap on the screen where it says "Click to Add Monitor."

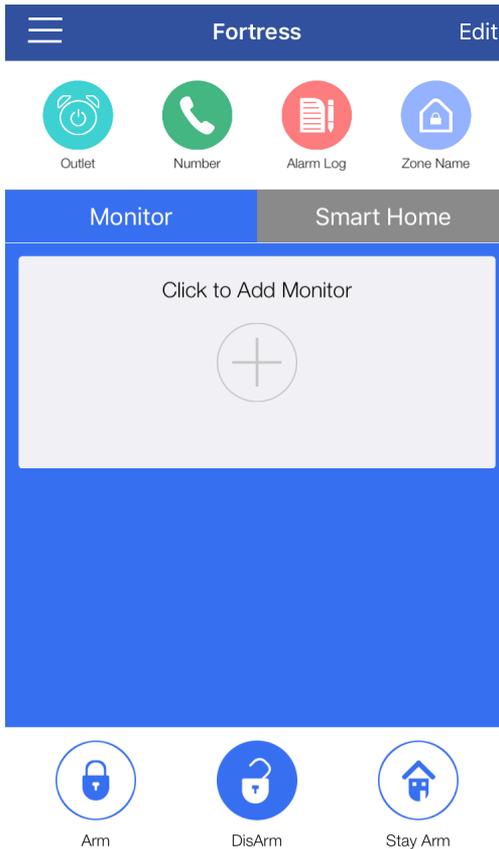



Section 7.3: Mobile App - Cameras




Android

After tapping on the '+' icon, you will be prompted to plug your camera into a wall outlet for power.


Using a pin, paperclip, or similar object, press and hold "Reset" on the bottom of the camera, until you hear a sound effect like a blade slicing. This is the camera's connection sound.

(Screenshots not to scale.)

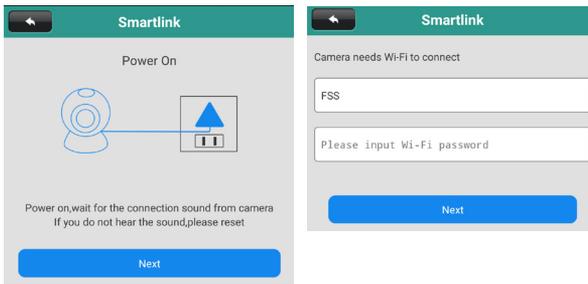

After you hear the connection sound (blade sound effect) from the camera, tap Next, and enter your WiFi password. Then tap Next again.

On the next screen you'll see the words "Waiting for connection." This step may take a few minutes. During this time, the camera may make some noises as well. When prompted, enter the camera's password. The default password for the camera is 123.

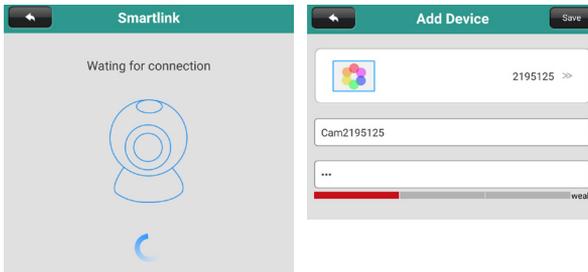




iPhone

After tapping on the '+' icon, you will be prompted to plug your camera into a wall outlet for power.


Using a pin, paperclip, or similar object, press and hold "Reset" on the bottom of the camera, until you hear a sound effect like a blade slicing. This is the camera's connection sound.

(Screenshots not to scale.)

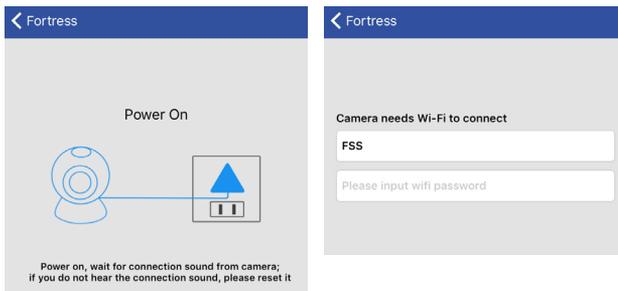

After you hear the connection sound (blade sound effect) from the camera, tap Next, and enter your WiFi password. Then tap Next again.

On the next screen you'll see the words "Waiting for connection." This step may take a few minutes. During this time, the camera may make some noises as well. When prompted, enter the camera's password. The default password for the camera is 123.

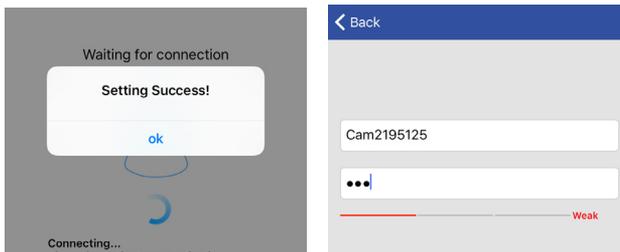




Section 7.3: Mobile App - Cameras



Android

The camera will now be visible in the Remote Monitoring tab on the Dashboard.

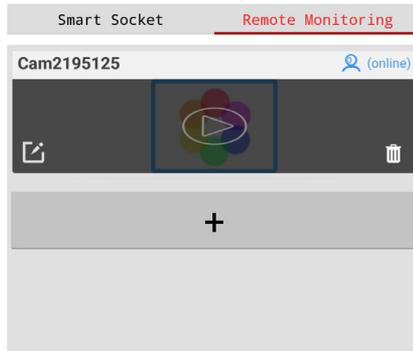

Tapping on the camera in the list will bring up its live feed view. (The screenshot below has been intentionally blurred.)



This screen also includes an option for selecting HD or SD video quality, a date and time stamp, the number of current viewers on this camera, and a button to enable the camera's intercom.

To remove a camera from the list on the app, tap on its trash can icon.

Section 7.3: Mobile App - Cameras



iPhone

The camera will now be visible in the Remote Monitoring tab on the Dashboard.



Tapping on the camera in the list will bring up its live feed view. (The screenshot below has been intentionally blurred.)



This screen also includes an option for selecting HD or SD video quality, a date and time stamp, the number of current viewers on this camera, and a button to enable the camera's intercom.

To remove a camera from the list on the app, tap on its trash can icon.




Section 7.4: Mobile App - GSM Mode



Android

On the first screen of the app after it is launched, you can also choose to use the app in "GSM Mode." Note that this mode requires an active SIM card in the alarm system, and it uses the SIM card's minutes to send text messages to the panel.

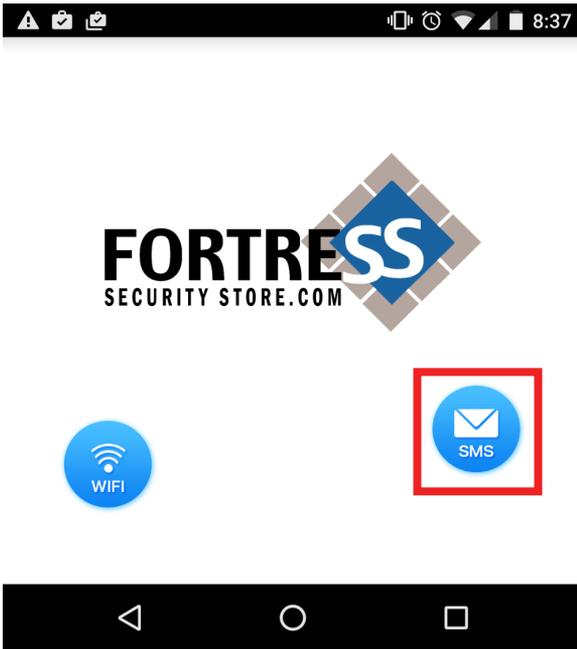


(Screenshot not to scale.)

Tap on the "SMS" icon to access the app in GSM Mode. The GSM Mode is the same as the app for customers that have the Total Security system (without WiFi). You can refer to the "Fortress Total Security App Manual (GSM)" document for more information about the GSM Mode of the WiFi app.



iPhone

On the first screen of the app after it is launched, you can also choose to use the app in "GSM Mode." Note that this mode requires an active SIM card in the alarm system, and it uses the SIM card's minutes to send text messages to the panel.

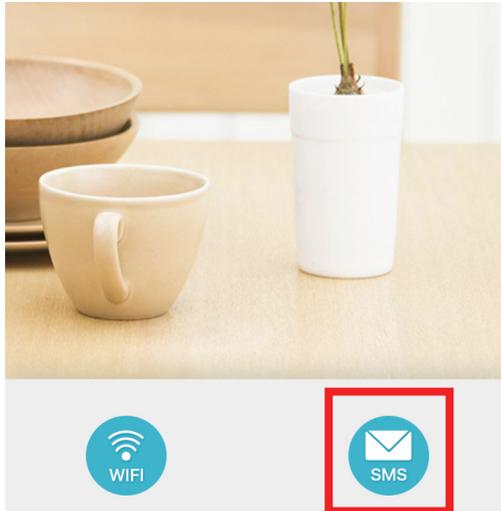

Tap on the "SMS" icon to access the app in GSM Mode. The GSM Mode is the same as the app for customers that have the Total Security system (without WiFi). You can refer to the "Fortress Total Security App Manual (GSM)" document for more information about the GSM Mode of the WiFi app.



FORTRESS 